



ALLIANCE HOBBY

36 S ARCH AVE UNIT 2283
ALLIANCE OH 44601-6315
sales@alliancehobby.com

Crosman 2260 & Benjamin Discovery Aftermarket Brass Trigger Installation


- 1) Awesome installation video located here:
 - a. <http://alliancehobby.com/2260brasstrigg>
- 2) Remove the safety from the trigger assembly so that you can remove the stock.
 - a. Refer to separate instructions on next page.
- 3) Remove the stock.
- 4) Install the two included set screws into the two holes in the back of the trigger assembly with included .050" hex wrench. Only turn a few threads.
- 5) Remove assembly side plate by unscrewing the two slotted screws on the right side of the assembly.
 - a. It may be a good idea to take a photograph of the exposed assembly if this is your first time.
- 6) Remove and discard both the plastic trigger and the coiled trigger spring.
- 7) Slip included coiled spring over the lower set screw you just installed.
- 8) Insert brass trigger similarly to the way the plastic trigger was installed.
 - a. The hardest part of the entire install process is getting the trigger in front of the coil spring while keeping the spring itself in place.
- 9) Insert sear spring similarly to the way it was originally.
- 10) Replace side plate and screws.
- 11) Adjust set screws to your liking, test by dry-firing.
 - a. Safety issues (trigger operates despite safety location) is attributable to poorly tuned set screws.
- 12) Mount stock.
- 13) Insert safety.



Safety must be removed to remove stock onto gun.

After trigger and stock are installed on gun, reinstall safety.

Take a SMALL flat-blade screwdriver and find the spring inside the safety hole. Push it forward.

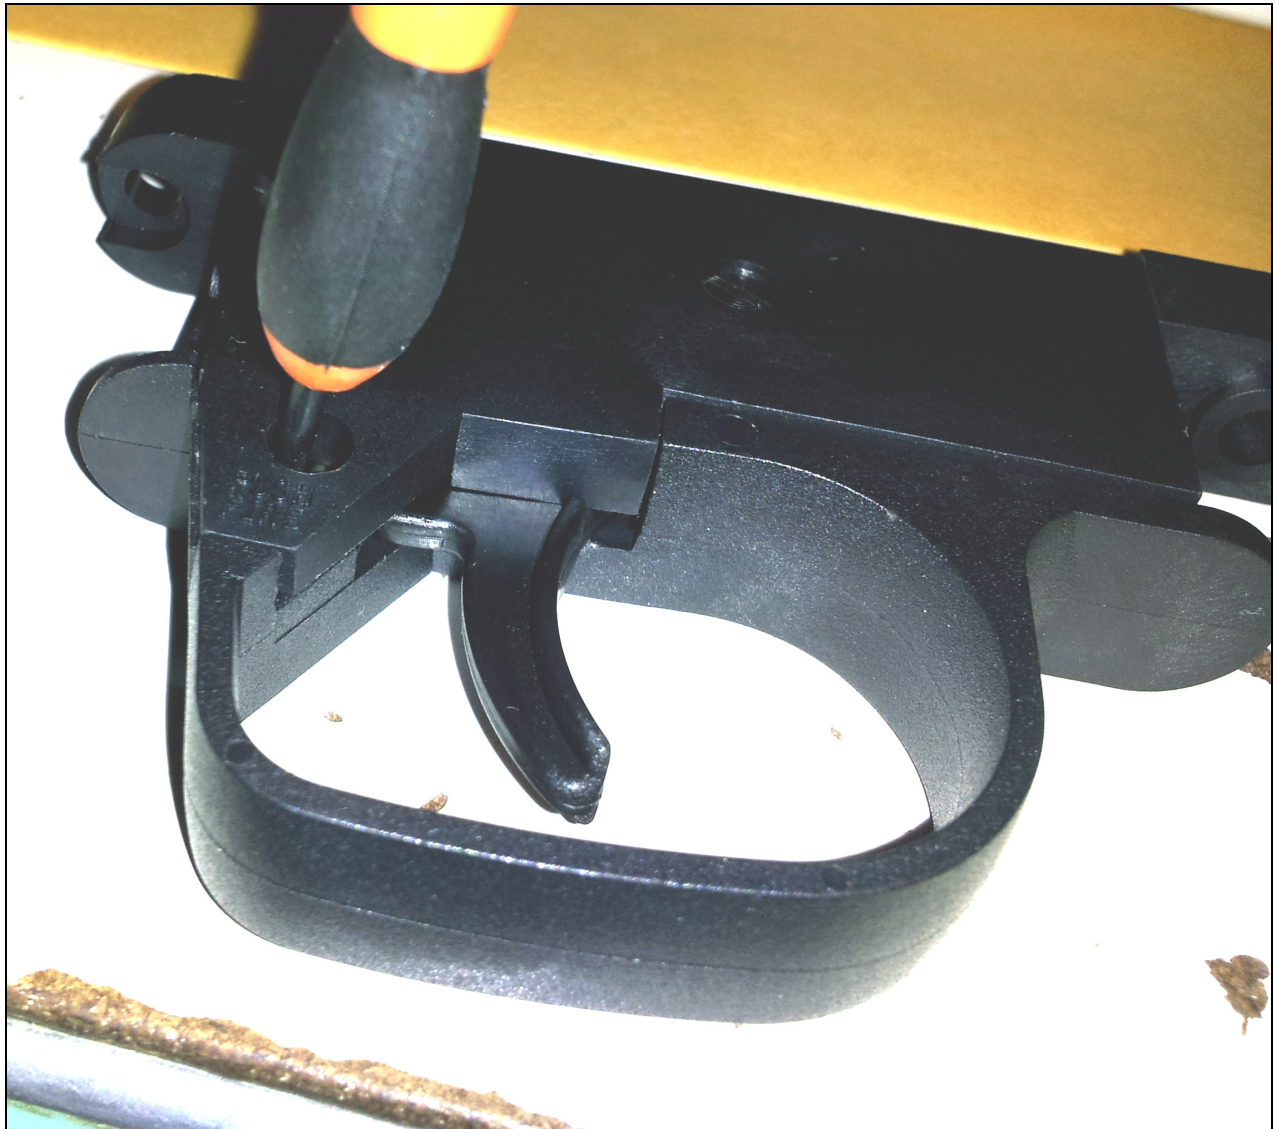

Push spring forward until the tip is exposed directly behind the trigger.



Take a razor or similar thin object and hold the spring forward.

With spring held forward, the safety will easily fall out of, or reinsert back into the hole.

After safety is removed/inserted, remove razor.

